

 
 
# Blind Sider-X2™

## FEEDER / BAIT LIGHT


### Blind Sider-X2™ Feeder/Bait Light

Thank you for purchasing the Blind Sider-X2™ Feeder/Bait Light from Elusive Wildlife Technologies, LP. Hunting or viewing wildlife after sunset is extremely exciting, yet very challenging. The Blind Sider-X2™ provides just the right amount of illumination for you to make your shot without spooking game. Motion activation watches for you and alerts you when game is near. Designed to attach in a myriad of ways, the Blind Sider-X2™ is ultra portable and versatile. Lighting up the night for your shot has never been easier.


If you have not already done so, please check your local game laws to ensure it is legal to use an artificial light source while hunting or observing animals at night. Elusive Wildlife Technologies, LP and its affiliates do not condone or promote the use of any of our products as a means to illegally harvest any animal. Please take a moment to read these instructions thoroughly before initial use. Also, reading the included helpful tips will ensure you get the most out of your Blind Sider-X2™ and ensure your warranty remains in effect for the full 12 month period.

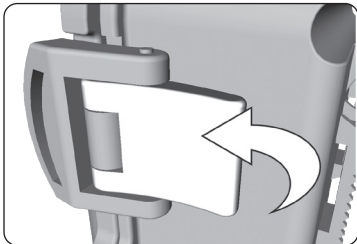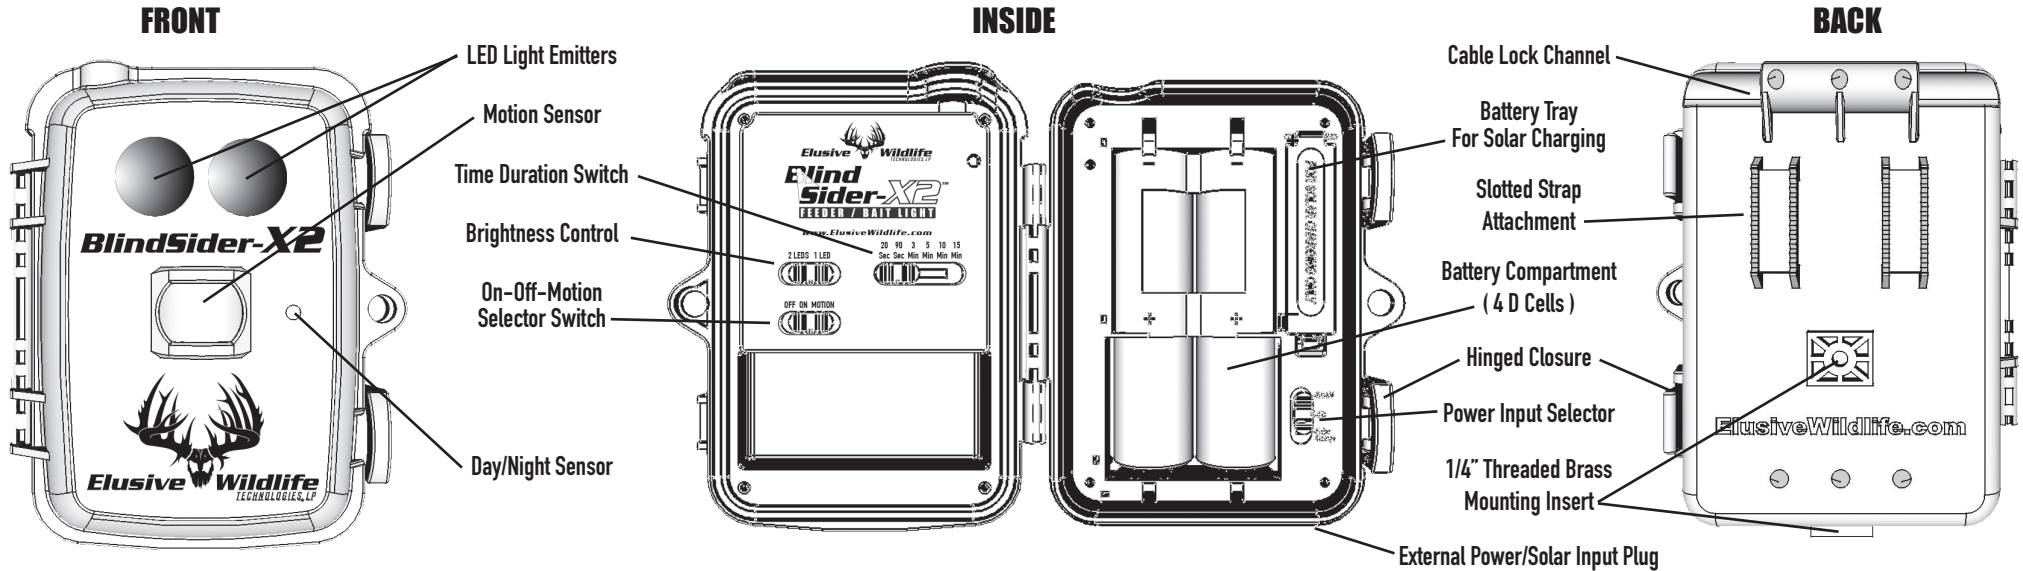

 
Open the hinged closures to access inside of unit.

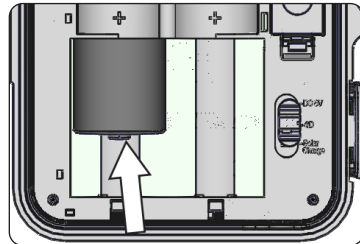

 
Insert (4) D Cell batteries with negative (-) terminal facing upward on all batteries.

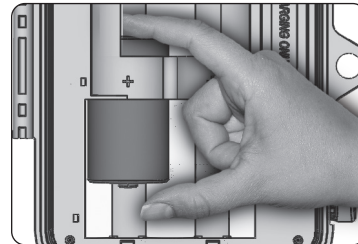

 To remove batteries, push down with index finger on bottom battery in window while pulling up and out with thumb.

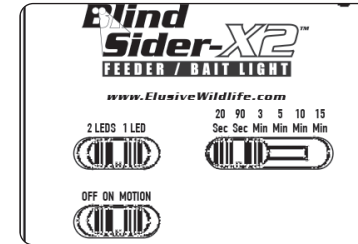

 Select your desired mode of operation: Brightness, Duration, On/Off/Motion, then close the unit.

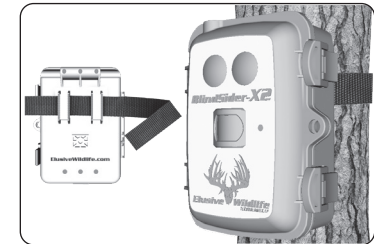

Position camera on tree with strap and cam buckle or use 1/4" threaded inserts to secure to a mounting device.

## Operating the Blind Sider-X2™

The Blind Sider-X2™ is very simple to operate. Open the light housing by lifting the two (2) cam locking hasps up and forward towards the front of the unit. Fold open the light housing and install four (4) D cell batteries into the battery compartments located on the right hand side. Two batteries go in each tube and will fit snugly. All batteries should be installed with the negative (-) terminal of the battery pointing toward the top of the Blind Sider-X2™. Once batteries are installed, you are now ready to power the unit on. WARNING: LED is extremely bright, avoid looking directly into LED at all times.

## Anti-Spook Technology™

When the Blind Sider-X2™ is activated, the LEDs will turn on in at 25% power and gradually increase to 100% power over one minute. This gradual increase in brightness is especially effective in preventing the animal from spooking when the light is activated.

## Brightness Control

The Blind Sider-X2™ was built to operate on a single LED for low power consumption, or two (2) LEDs for maximum brightness. You may use the Brightness Control Switch to select between using one or two LEDs.

## Using Blind Sider-X2™ Motion Detection

Your Blind Sider-X2™ comes with a built in motion detector. To utilize the motion function, find the mode selector switch located on the panel opposite the batteries (left side). The Blind Sider-X2™ has a 3 position switch, OFF-ON-AUTO. To operate the device utilizing the motion sensor, simply slide the switch to the AUTO position. This will activate the motion sensor and the light will turn on when motion is detected, effectively illuminating your hunting area. If you would rather have your Blind Sider-X2™ remain ON for the duration of your hunt, switch the light to the ON position. This deactivates the motion sensor and switches the light to turn on at dusk and turn off at dawn.

## Time Duration

When using The Blind Sider-X2™ in Motion Detection mode, the light will turn on when motion is detected. It will continue to operate as long as an animal(s) is actively moving in the area within range of the motion detector. Once game activity ceases, the light will remain on for a period of time, then power off. The Time Duration switch will allow you to adjust the amount of time (20 seconds, 90 seconds, 3 minutes, 5 minutes, 10 minutes, or 15 minutes) the light stays on after game activity ceases before it powers off.

## Multiple Power Options / Solar Charging

The Blind Sider-X2™ has four different options to power the light; using four (4) D size batteries, using an external 6 volt battery, using an 18650 battery with a 6 volt solar charger, and Using the REAKTOR™ Solar Power Pack for maintenance free operation.

- To use D size batteries, move the Power Input Switch to the middle position labeled "4D". Place four (4) D size batteries in the battery compartment with all of the positive sides pointing down.

- To power with an external battery, move the Power Input Switch to the top position labeled "DC 6V". Remove the rubber Plug in the bottom of the light, and then plug the optional power cord to the bottom of the light. Attach the other end of the power cord to a 6 volt battery.

- To use the optional solar charger and 18650 battery, move the Power Input Switch to the bottom position labeled "Solar Charge". Place the 18650 rechargeable battery in the "For Solar Charging Only" battery tray with the positive end facing up. Then remove the rubber plug on the bottom of the light, and plug the solar charger into the light. For more information about the optional Solar Charger, please contact info@elusivewildlife.com.

- If needed, one 18650 battery can also be used to power the light even without the solar charger. One 18650 battery it will last two–three nights before needing to be recharged, depending on the activity level.

- To use the REAKTOR™ Solar Power Pack, set the Power Input Switch to the top position labeled "DC 6V". Then use Cable B, included with the REAKTOR™, to plug into the bottom of the light and then into the 6 Volt port on the REAKTOR™ Solar Power Pack.

## Mounting your Blind Sider-X2™

The Blind Sider-X2™ was built to mount like a trail camera. Included is a standard nylon web strap with cam buckle as well as two (2) 1/4" threaded brass inserts for use with various mounts.

- To mount with included strap, simply thread the end opposite the cam buckle through the two vertical slotted brackets on the back of the light housing. Position the light on a tree, post or other stationary object with the front of the unit facing your feeder, bait pile, game trail, or other area you expect animals to approach. Your Blind Sider-X2™ will illuminate a rather large area so it is not necessary to precisely aim it as you would a trail camera. Once you have your light positioned correctly, wrap the bare end of the strap around the stationary object you are securing the light to. Thread the end of the strap through the cam buckle, tighten and secure the cam buckle by closing the latch. To remove the light, simply open the latch, pull the strap free from the buckle and remove your Blind Side–R™.

- You can also mount your Blind Sider-X2™ to virtually any 1/4" threaded trail camera mount. The Blind Sider-X2™ has brass mounting inserts on both the back and bottom of the housing. Carefully thread the unit clockwise onto your preferred camera mount and position the light facing the direction or location you expect game to approach. To remove, simply unscrew the mount by turning counter-clockwise until the Blind Sider-X2™ is no longer connected to the camera mounting device.

## Helpful Tip

Although much more forgiving than a trail camera, when mounting your Blind Sider-X2™ look for a tree or post that is somewhat straight. This will make aiming your light to the proper location much easier. The Blind Sider-X2™ comes with molded stabilizing spikes and naturally mounts at a downward angle. Keep this in mind when selecting your mounting location.

## Warranty

Elusive Wildlife Technologies, LP warranties this product for a period of 1 year from original date of purchase. This warranty covers manufacturer defects as well as malfunction during normal operation. Please complete the warranty registration and mail in along with proof of purchase to register your light. You may also e-mail your registration and proof of purchase to info@elusivewildlife.com.

Your Blind Sider-X2™ is not waterproof. It is water resistant ONLY when used as intended. Do not submerge your light, this will void your warranty. Take care to insure the light is mounted properly and securely. Unthreading of 1/4" brass inserts from unit is not covered under warranty. Take care to not over-tighten mounting devices or allow to rust while attached to the Blind Sider-X2™.

Elusive Wildlife Technologies, LP will not warranty any light damaged by user neglect or failure to adhere to these instructions and guidelines. No lights will be warranted due to water penetration, animal damage or theft. It is strongly advised that you lock your Blind Sider-X2™ with a padlock and cable by utilizing the cable channel located on the back of the unit.

## Blind Sider-X2™

---

Date of Purchase

---

Name

---

Address

---

City, State, Zip

---

Phone

---

E-mail

---

Name of store where purchased

Received as a gift  or Purchased for yourself

Please rate your level of satisfaction with this product from 1-10 with 10 being most satisfied. If you have yet to use this product, please circle N/A. Please circle one.

1   2   3   4   5   6   7   8   9   10   N/A

Elusive Wildlife Technologies, LP respects your privacy and we will not sell or provide your personal information to any other party. However, we would like to occasionally send you information about your Elusive Wildlife product or special offers. If you do not wish to receive this information please check here .

Please mail or e-mail warranty info to:  
**Elusive Wildlife Technologies, LP**  
**1107 West Dallas Street, Suite A**  
**Conroe, TX 77301**  
**800-780-6861 email: info@elusivewildlife.com**