

Installation Instructions

Basic Hinge Window

1. Take a 1/2" to 1" off of each side and cut your opening.
Ex: A 24x12 would need a rough opening of 23x11.
2. Place the window over the opening.
3. Screw in hinges and swivels.

Note*: Wall thickness does not matter for these windows to operate properly.

Deluxe Hinged Window

1. Add 1/8 inch to the height and length of the size window purchased.
Ex: A 24x11 1/2 window would need a rough opening of 24 1/8x11 5/8 for a proper fit.
2. Cut the hole needed.
3. Install a weatherproof caulk around the inside flange of window and place in opening.
4. Place the window through the opening and secure the outside wall using screws or bolts and nuts.
5. From inside the blind, raise the window up and secure the metal magnet holder on the wall to line up with the magnet on the window.

Note*: Wall thickness cannot exceed 2 inches for this window to swing all the way up.

Horizontal Slider

1. Add 1/8" to height and length for a proper fit.
Ex: A 24x11 1/2 window would require a rough opening of 24 1/8 x 11 5/8
2. Cut the proper sized hole for the window purchased.
3. Install a weatherproof caulk around the inside flange of window and place in opening.
4. Place the window through the opening and secure the outside wall using screws or bolts and nuts.

Note*: Wall thickness does not matter for these windows to operate properly.

Deer Blind Doors

1. Add a 1/8 inch to inside frame dimensions of door purchased.
2. Cut your desired hole.
3. Install a weatherproof caulk around the inside flange, place in opening, and install with screws in the holes provided.